

Thank you for your purchase of:



By Broadcastvision Entertainment

The dynamic AudioFetch system enables Android and Apple smartphones and tablets with the AudioFetch App to receive local audio from TVs etc. AudioFetch should operate in a “plug-and-play” manner when one audio source per channel is connected to AudioFetch and the Ethernet jack is on a suitable WiFi router. Additional instructions are included below. Please note that AudioFetch can be ordered/expanded in 4 channel increments.

Your AudioFetch application is as follows:

Proposal Number : _____

AudioFetch Model : _____

Specific Cables Requested : _____

Note: If no specific cables or lengths are requested, a 25' Ethernet cable and 6' RCA to stereo jack cables for each channel will be enclosed.

Additional cable lengths and types are available at www.monoprice.com

Please call AudioFetch technical support at 888.330.4283 x3 if your application differs from the above.

CONTENTS

1.	The AudioFetch App	3
2.	Connecting AudioFetch to audio sources and WiFi	3
3.	AudioFetch “Swag” - TV Signage, Table Tents, Cardio Clings and Window Stickers.....	4
4.	The free AudioFetch Ad Portal	4
5.	Expanding AudioFetch for Additional Channels - Add a Card	5
6.	OPTIONAL: Accordio - Provides Wireless Inputs using existing or new FM/900 MHz transmitters to save cabling audio sources to AudioFetch.....	7
7.	Configuration Management – “The Doghouse”	8
7.1.	Accessing the Doghouse.....	8
7.2.	Welcome Page and Navigation Links.....	11
7.3.	Network Setup	12
7.4.	Multi-Box Setup.....	13
7.5.	Channels Setup.....	20
7.6.	Audio Settings	23
7.7.	System Status.....	27
7.8.	Tools and Utilities	29
7.9.	Contact & Links	32
7.10.	Discovery List.....	32
8.	Stadium Mode	34
9.	Reference Information - Network Traffic and Guest Networks.....	39
10.	Regulatory Compliance Statements.....	42

1. The AudioFetch App

Download the latest AudioFetch app for free from the Google Play® or Apple iTunes® store. Familiarize yourself with the drop down menu including the help menu section should it be needed during installation.




2. Connecting AudioFetch to audio sources and WiFi

Connect each audio source to a channel input on AudioFetch. There are 3 input options per channel. **CHOOSE ONLY ONE INPUT PER CHANNEL.** Two popular analog connections are RCA (one red and one white) and a 3.5mm stereo jack (headphone jack). Either one can be connected into the Analog input of AudioFetch which is a 3.5mm stereo jack. Digital connection options are optical and digital coax.

Note that RCA and digital coax connections are not the same. A digital coax output (on TV, etc.) cannot connect into the AudioFetch analog input. An RCA analog output (from TV, etc.) cannot connect into the AudioFetch digital coax input. The configuration management pages can be logged into as described below to determine if a good audio signal is connected into the channel.

When connecting via digital inputs, always choose the audio source type (in the TV's setup) as PCM since Dolby-encoded signals are not supported.

Picture A: Cable Types

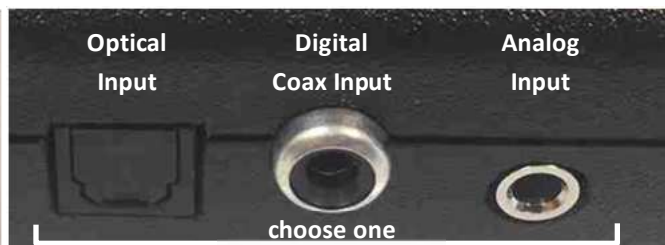Picture B: Audio Input Types


3. AudioFetch “Swag” - TV Signage, Table Tents, Cardio Clings and Window Stickers



Post the provided signage on the TVs. Cardio clings, table tents and door/window stickers are provided to enable patrons to easily obtain and use the AudioFetch app.

4. The free AudioFetch Ad Portal

The AudioFetch app displays custom ads and notices which can be managed from the cloud. Log into the ad portal at www.audiofetch.com/portal using the username and password provided below to post your ad/info graphic that can direct users to website, an e-mail address, and/or phone number that you specify. Add multiple graphics that rotate through at the time duration you specify. Call 888.330.4283 x3 to confirm your log-in credentials if needed.

Username : _____

Password : _____

5. Expanding AudioFetch for Additional Channels - Add a Card

Determine which model you currently have and order 1 or more expansion cards:

4



FETCH4 NE - 4 channel Non-Expandable

4



FETCH4 - 4 channel Expandable

8



FETCH8 - 8 channel Expandable

12



FETCH12 - 12 channel Expandable

16



FETCH16 - 16 channel Expandable

20+



+




ADD a 2nd, 3rd, or more AudioFetch boxes
FETCH20+ - 20+ Channel Expandable

Then follow these instructions to add additional card(s):

1

Remove the AudioFetch Cover then slide out the base AudioFetch card from the side rails.

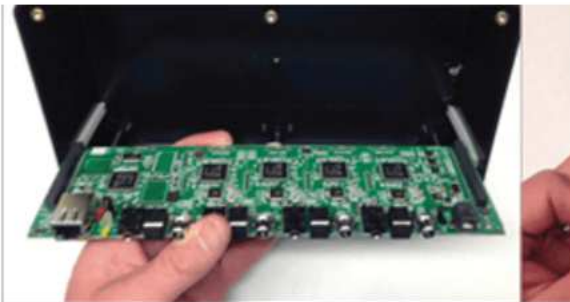

2

Connect the expansion channel card to the base card as seen here.



3

Place the base card into the side rails

4

Use an X-Acto knife to cut through the protective covering of the expansion card holes then reattach the top cover.



6. OPTIONAL: Accordio - Provides Wireless Inputs using existing or new FM/900 MHz transmitters to save cabling audio sources to AudioFetch.



Fitness centers and sports bars often have existing FM or 900MHz audio transmitters from Broadcastvision, Cardiotheater, Cardiovision, Mye, SportsSelect, etc. The Accordio box can be configured in 4 or 8 channel increments to receive audio wirelessly from transmitters at TVs or cable/satellite boxes.

Accordio - Available in 4 or 8 channel increments

When ordering Accordio, specify the desired channel line-up by channel scheme and channel number (i.e.: Broadcastvision Series 2, channels 1-4 or Cardiotheater xTV channels 1-8) corresponding to channels A-D or A-H of each Accordio box.

A stereo jack to stereo jack cable is included to cable the received audio to the AudioFetch channel inputs:



7. Configuration Management – “The Doghouse”


7.1. Accessing the Doghouse

Configuration settings (“The Doghouse”) for each AudioFetch box are viewed using a web browser on a device (PC, tablet, mobile phone, however not compatible with MAC) ***which must be connected to the same network as AudioFetch.***

Most applications do not require access to the Doghouse since the default settings are adequate. When adjustments are required, please review information in this section.

The “Doghouse Utility App” can be used to search for AudioFetch boxes on the network and provide easy one-click access to the Doghouse for each box. The Doghouse Utility App is available for Windows, Android, and iOS (not available for MAC), further information and install links can be found here: www.audiofetch.com/doghouse

On a Windows device: Install then run the Windows version Doghouse Utility to locate AudioFetch box(s) on the network. The Windows version Doghouse Utility looks like this:

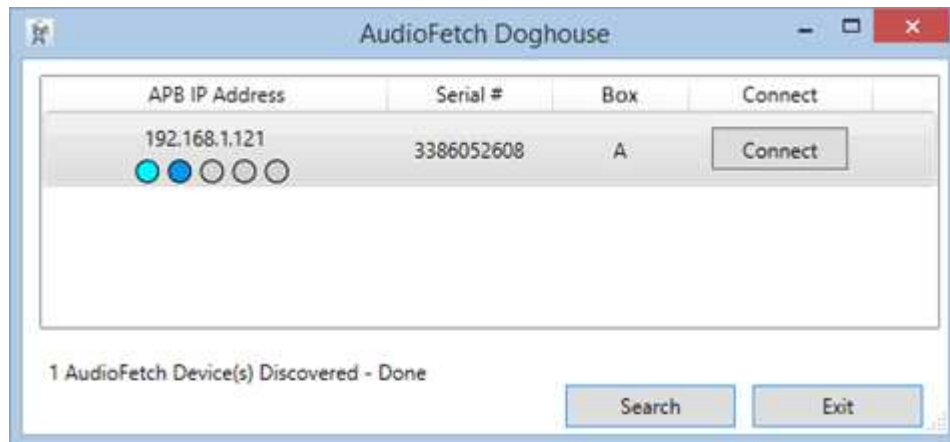


On Android or Apple (iOS) devices: Search and install “AudioFetch Doghouse” in the Google Play® (Android OS devices) or Apple iTunes® (Apple devices with iOS operating system) store, direct links to the store locations are provided on the web page referenced above.

Here are example screenshots of the Android Version Doghouse App (Apple version looks similar):


(1) Initial Screen after starting Doghouse App




(2) After pressing right-arrow (lower right corner)

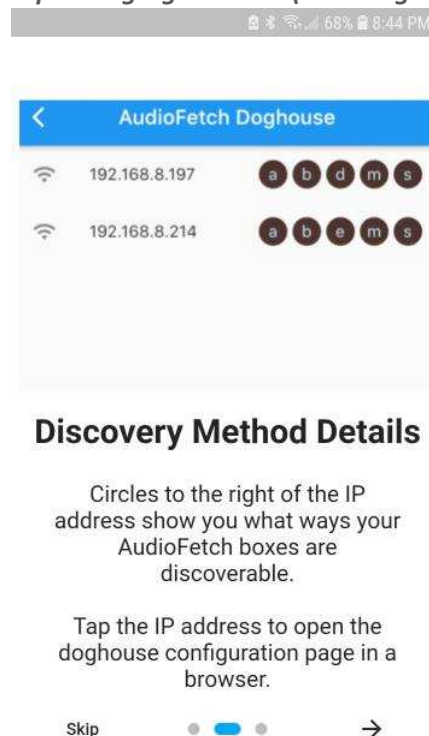

(3) After pressing right-arrow again

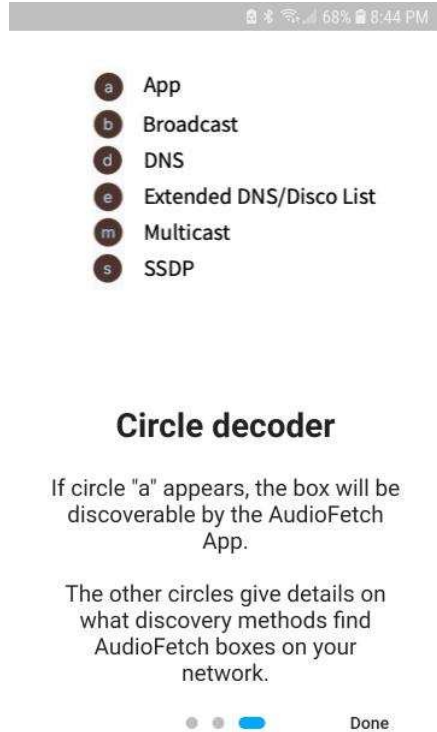


(4) After pressing Done (or Skip from earlier screens)

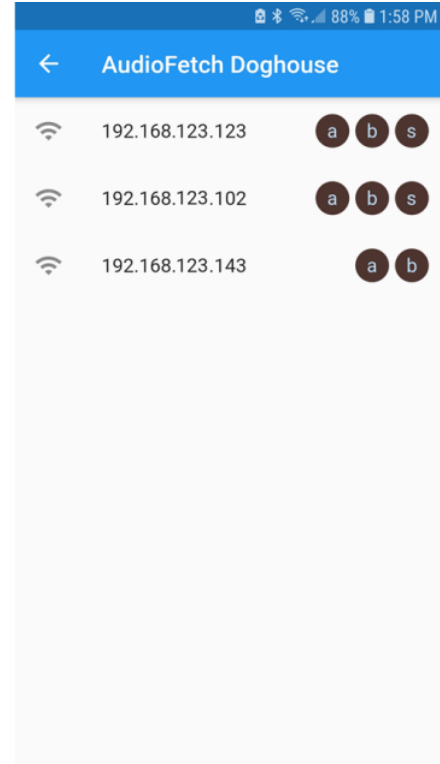

The second screen (2) provides help information and the two IP addresses listed are just examples, they do not indicate AudioFetch boxes found on your network.


The last screen (4) shows the list of AudioFetch boxes actually found/discovered on your Network, the circles with letters indicate which discovery methods worked on the network and whether the AudioFetch App will be able to discover and play audio.

The Windows version of the Doghouse App looks a bit different, the list of discovered boxes looks like this:

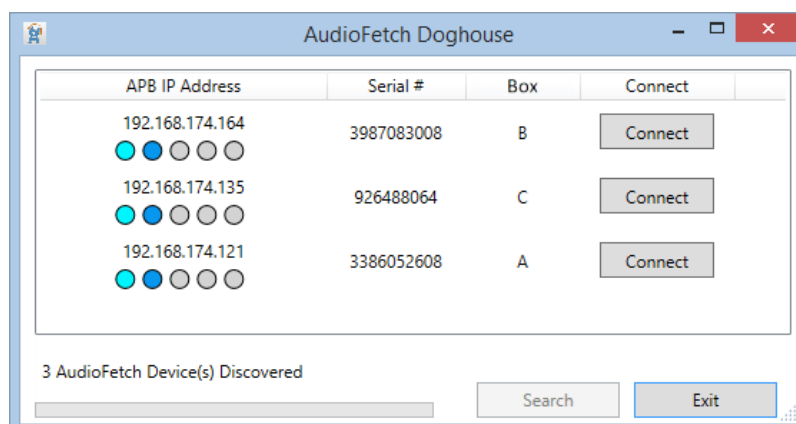

Each box has its own configuration settings, in other words each box has its own independent Doghouse. When installing a system with multiple boxes, each Doghouse must be accessed in order to configure each of the boxes correctly. More on this later...

Once the AudioFetch box(s) are displayed, tap in the information area for the desired box (Android/Apple) to open its Doghouse in your default web browser. In the Windows App click the desired Connect button. A Sign in dialog will be displayed (this is the Android version, Apple/Windows may look different but request the same info):

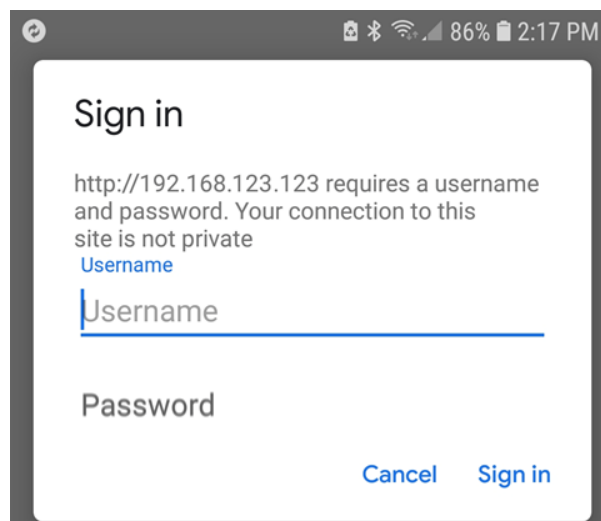

Default username is: **ADMIN** (all upper case)
Default password is: **admin** (all lower case)

The username and password may be changed, this will be described later.

7.2. Welcome Page and Navigation Links

After successful login you will see a welcome page similar to below:

**DOGHOUSE NAVIGATION**[Welcome
Page](#)[Network
Setup](#)[Multi-Box
Setup](#)[Channels
Setup](#)[Audio
Settings](#)[System
Status](#)[Tools &
Utilities](#)[Contact &
Links](#)[Discovery
List](#)**WELCOME**

Welcome to the AudioFetch Doghouse
(configuration management)

Navigate using the links above

[Link to AudioFetch reporting and ads portal online](#)

© 2014 - 2021 AudioFetch

Click the links in the NAVIGATION section to access each of the configuration pages. The NAVIGATION section will appear on all Doghouse pages.

7.3. Network Setup

On the **NETWORK SETUP** page check “Use Automatic IP Address” to have the AudioFetch box receive its’ IP address automatically (from the network’s DHCP server), this is the recommended setting. Or uncheck this setting and enter values for:

Manual IP Address

Subnet Mask

Gateway

The values must be correct for operation with the connected network, contact your IT network administrator for instructions if needed. Note that there is usually no need to enter manual information here when the network’s DHCP server has been configured with a reservation IP address for the AudioFetch Box.

NETWORK SETUP

Changes are not saved until the SAVE button at bottom of page is clicked

Use Automatic IP Address ☒

Manual IP Address

NETWORK STATUS

IP Address (being used)	192.168.123.102
Subnet Mask (being used)	255.255.255.0
Gateway (being used)	192.168.123.1
Ethernet Connection Speed	100 Mbps
MAC Address	00:1E:C0:AE:AC:E4

Warning - Save Settings button will cause restart of this AudioFetch box

After any changes are made on the **NETWORK SETUP** page, the “Save Settings” button at bottom of page must be clicked, otherwise the new settings will be lost when navigating away from this page. When the Save Settings button is clicked, the settings are saved and the AudioFetch box will automatically restart. If DHCP assigns a new/different IP address after the restart, then use the Doghouse Utility again.

7.4. Multi-Box Setup

Where more audio channels are required, multiple AudioFetch boxes can be connected to the same network. The **MULTI-BOX SETUP** page is used to configure AudioFetch to work correctly in multi-box installations by uniquely identifying each box.

There are 2 types of identification supported in multi-box installations:

- (optional) Location Name
- (required) Box Identification

Use of Location Name is optional and by default disabled. The example screenshot on next page shows this default setting (Location Features disabled).

MULTI-BOX SETUP

Multiple AudioFetch boxes may be used in a system. Default operation is with location features disabled, in which case up to 32 boxes may be used on a network and each box must be assigned a unique box letter (in Box Identification section below). Assign this unit's unique box letter below, and then access the Doghouse for every other box on the network to assign different unique box letters for them.

Enabling location features allows multiple locations of up to 32 boxes at each location to be used on a network. There is no limit to the number of different locations. If any box on a network has location enabled, then the AudioFetch App upon startup will ask the user to select a location to access. Channels will be displayed for boxes at the selected location only (boxes with that location name set). When using location features, all boxes on the network should have location features enabled and location names specified.

Default Operation (location features disabled):

- Maximum 32 boxes on network
- All boxes must have location features disabled
- Every box must be assigned a different/unique identification (box letter, see further below)
- AudioFetch App will not ask user to choose location, all enabled channels of all boxes will be displayed

To use Location Features:

- All boxes should have location features enabled and location name specified
- Maximum 32 boxes at each location, no limit on number of different locations
- AudioFetch App will ask user to choose location, then will display all enabled channels for boxes at that location only
- At each location, every box must be assigned a different/unique identification (box letter, see further below)
- Box letters can be re-used at other locations
- Use of GPS coordinates is optional, if used then enter same GPS coordinates into all boxes at a particular location (do the same for all other locations)
- If GPS coordinates specified then App will use them to sort the list of locations displayed to the user (based on location of user's mobile device)

Location Features (optional)

Use of location features is optional, if used here then all boxes on network should use

Enable Location features

☐ All other location settings disabled when this checkbox not enabled

Location Name for this box

(maximum 40 characters)

Enable GPS (optional)

☐

Latitude

Enter value between -90.00000 and 90.00000 (5 decimal places max)

Longitude

Enter value between -180.00000 and 180.00000 (5 decimal places max)

[Save Location Settings](#)

[Undo Changes](#)

Assigning an identification letter (A, B, C, D) to each box determines the order of channels displayed in the AudioFetch App. The channels from BOX A will appear first, BOX B channels will be next, etc. **Each box must be assigned a different unique letter** by going into the Doghouse for each box. If location features are enabled then each box within a particular location must be assigned a different unique letter but boxes at other locations can re-use the letters (but must be assigned different/unique letters within their location). Please see the AudioFetch User Manual for further details and examples. Select the letter for **this AudioFetch box** in the dropdown list below, if only using one AudioFetch box then leave it set to BOX A.

Box Identification (mandatory)

Single-box systems: set to BOX A, Multi-box systems: refer to instructions above and user manual

This box (SN: 123456789) is set to be:

(changes to box letter saved immediately)

Changing this setting will clear the list of AF Boxes below - just click the detect link again.

[Click here to detect other AudioFetch Boxes](#)

Other boxes must be on the same subnet to detect, network must support SSDP (multicast) discovery. Detection will not work on systems using other discovery methods including DNS, mDNS, etc. **If the same box (sn) appears twice**, please click the link again to re-scan.

IP Address	MAC Address	Serial Number	Setting
192.168.174.101	00:1E:C0:AE:AC:E4	123456789	BOX A
--	--	--	--
--	--	--	--
--	--	--	--
--	--	--	--
--	--	--	--

Selection
Options


Box A
⋮
Box AF

Most AudioFetch installations are single-box, in this case ensure that “BOX A” is selected from the drop-down Box Identification list - as shown in the image above (this is factory default).

With multiple boxes, and when all boxes in a system have Location Features disabled, up to 32 boxes are supported and each box must be assigned a unique Box Identification letter (BOX A, BOX B, BOX C, etc.) in the Box Identification section of the Multi-Box Setup page. There are 32 choices available for box letter: BOX A through BOX AF.

The box identifier controls the order of channels displayed in the AudioFetch App. The channels from BOX A will be displayed first, channels from BOX B will be displayed next, etc.

For example, in a 2-box installation where a 16-channel box has been designated BOX A and a 4-channel box has been designated BOX B, the channels will be displayed by the App like this:

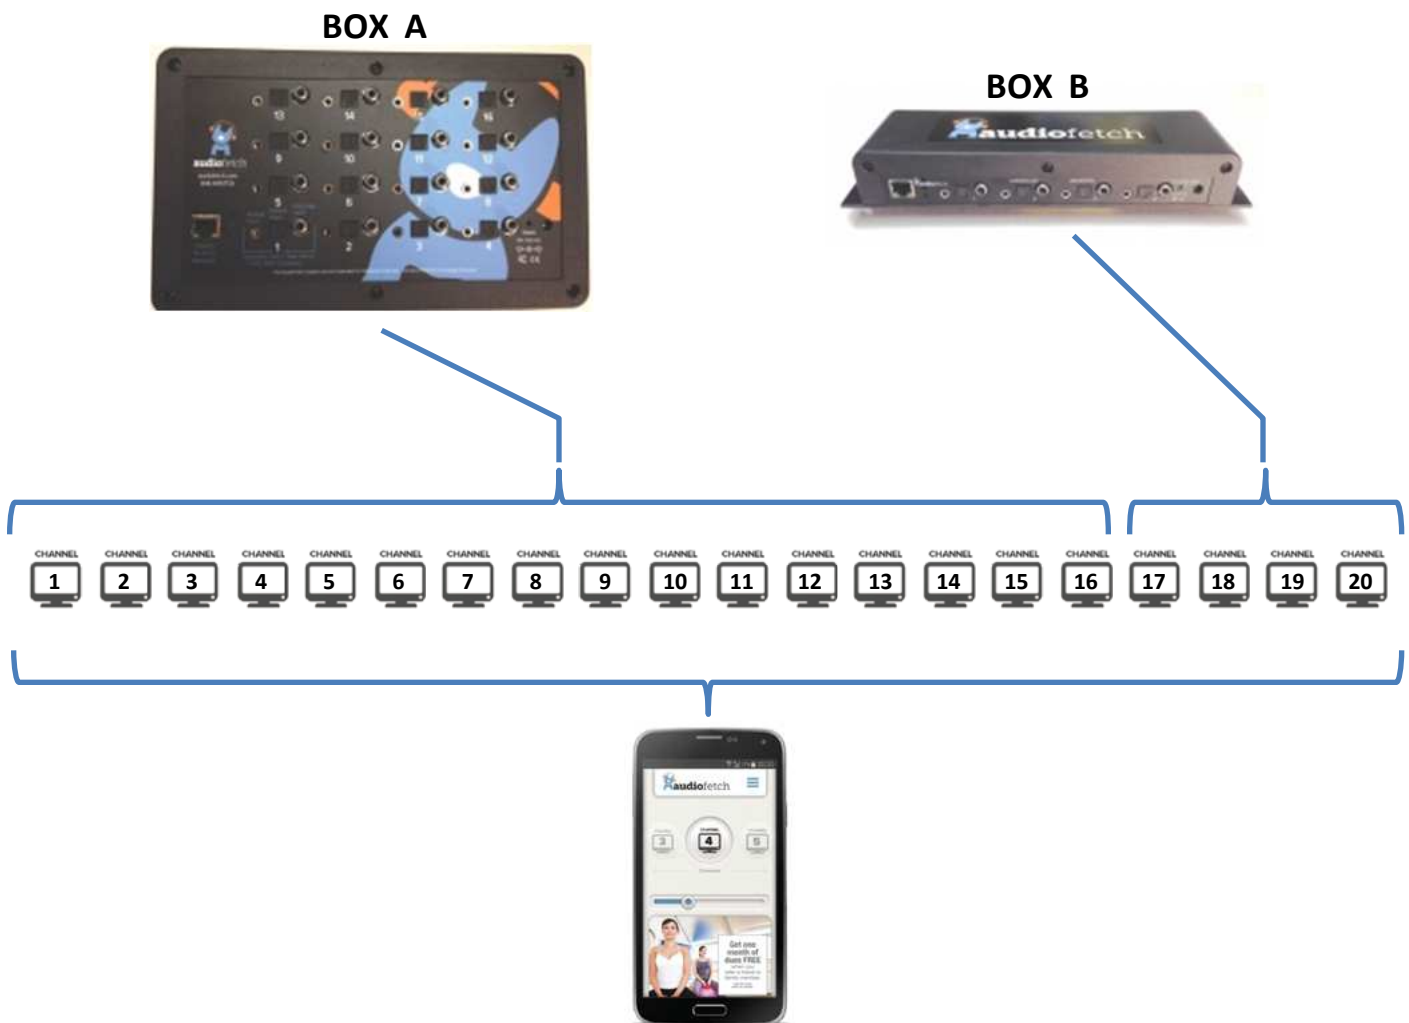

Note that if channel names have been assigned (see info about that later in this document), the names will be displayed by the app instead of default channel numbers shown above, but the ordering will still be determined by the box letter designations.

Each AudioFetch box must be separately configured with a BOX A/B/C/D... designation. Default from the factory is BOX A, so when installing a multi-box AudioFetch system, one must access the Doghouse for each and every box and set the IDs to be different/unique for each box, to ensure channels from each of the boxes are mapped to the desired display order (and numbering) on the AudioFetch App.

IMPORTANT: Each box must have a different designation!
Only exceptions: Location Features enabled (see below)
 Stadium Mode operation (see chapter 8)

If two or more boxes have the same ID designation (in a system with Location Features disabled), then some channels will not be available in the AudioFetch App. Accessing the Doghouse and configuring the BOX designations is mandatory in multi-box installations.

Note: When multiple AudioFetch boxes are ordered to work together on the same network, they will be pre-configured for you and this procedure will not be necessary.

To configure the boxes in a multi-box installation not using Location Features:

1. Decide how you want the channels from each box to be ordered by the App (which box's channels display first, second, third, etc.).
2. Use the Doghouse App to find/display all of the boxes on the network.
3. Access the Doghouse for the first box (You want the App to display this box's channels first), navigate to the **MULTI-BOX SETUP** page, ensure the Location Features checkbox is not checked, then use the drop-down selector to select "BOX A", the new box letter setting is saved automatically.
4. Access the Doghouse for the second box, ensure Location Features not enabled, and select "BOX B".
 - a. NOTE: Each box has its own Doghouse, you must access each box's Doghouse separately.
5. If a third box is present: Access the Doghouse for the second box, ensure Location Features not enabled, and select "BOX C".

6. If a fourth box is present: Access the Doghouse for the second box, ensure Location Features not enabled, and select “BOX D”.
7. Continue this procedure for any additional boxes present.

A maximum of 32 boxes are supported in a multi-box system with Location Features disabled.

To assist in setup, the Doghouse **MULTI-BOX SETUP** page contains a link to detect/display info about other boxes present on the local network. Click the link, and then a notification page will appear for about 5 seconds while the other boxes are being detected. Note that other-box detection in the Multi-Box Setup page works only on networks which fully support SSDP discovery protocol. Some network configurations do not support SSDP, in this case use the Doghouse Utility as an alternative to discover all the boxes on the network and display their box settings.

The **MULTI-BOX SETUP** page should display again with the list of boxes filled out (if the network supports SSDP). See the example below which shows the detection results for a 3-box system.

Box Identification (mandatory) Single-box systems: set to BOX A, Multi-box systems: refer to instructions above and user manual

This box (SN: 123456789) is set to be: BOX A (changes to box letter saved immediately)

Changing this setting will clear the list of AF Boxes below - just click the detect link again.

[Click here to detect other AudioFetch Boxes](#)

Other boxes must be on the same subnet to detect, network must support SSDP (multicast) discovery. Detection will not work on systems using other discovery methods including DNS, mDNS, etc. **If the same box (sn) appears twice**, please click the link again to re-scan.

IP Address	MAC Address	Serial Number	Setting
192.168.123.123	00:1E:C0:AE:BD:C9	3987083008	BOX A
192.168.123.143	54:10:EC:3B:35:D7	1255484672	BOX B
192.168.123.102	00:1E:C0:AE:AC:E4	123456789	BOX C
--	--	--	--
--	--	--	--
--	--	--	--

When the drop-down selector is used to change the box designation, the list of other boxes is cleared. In this case just click the detection link again to re-display all the boxes.

After detection, the box setting for each will be displayed as shown above (in the column labeled “Setting”). When configuring a multi-box system, use the detect link to double-check that all boxes have different/unique designations, or use the Doghouse App to do this. For example,

this display of detected boxes indicates a problem because two boxes are set to the same designation:


IP Address	MAC Address	Serial Number	Setting
192.168.0.73	00-1e-c0-ae-bd-c9	3987083008	BOX A
192.168.0.236	00-1e-c0-dd-10-88	1341657088	BOX A
192.168.0.196	00-1e-c0-ae-ac-e4	123456789	BOX B
--	--	--	--

In this case, one of the conflicting boxes should be changed to BOX C.

More about multi-box channel numbering in the App:

The App by default reserves 16 channels for each box when displaying channel numbers in a multi-box system – this is because each box can potentially contain up to 16 channels. This has a special impact when boxes with fewer than 16 channels are used.

In the previous example, a 2-box system had one 16-channel box designated as BOX A and one 4-channel box designated as BOX B. What if the designations were reversed? In this case, the App would display channels 1-4 for BOX A (the 4-channel box), and display channels 17-32 for BOX B, like this:

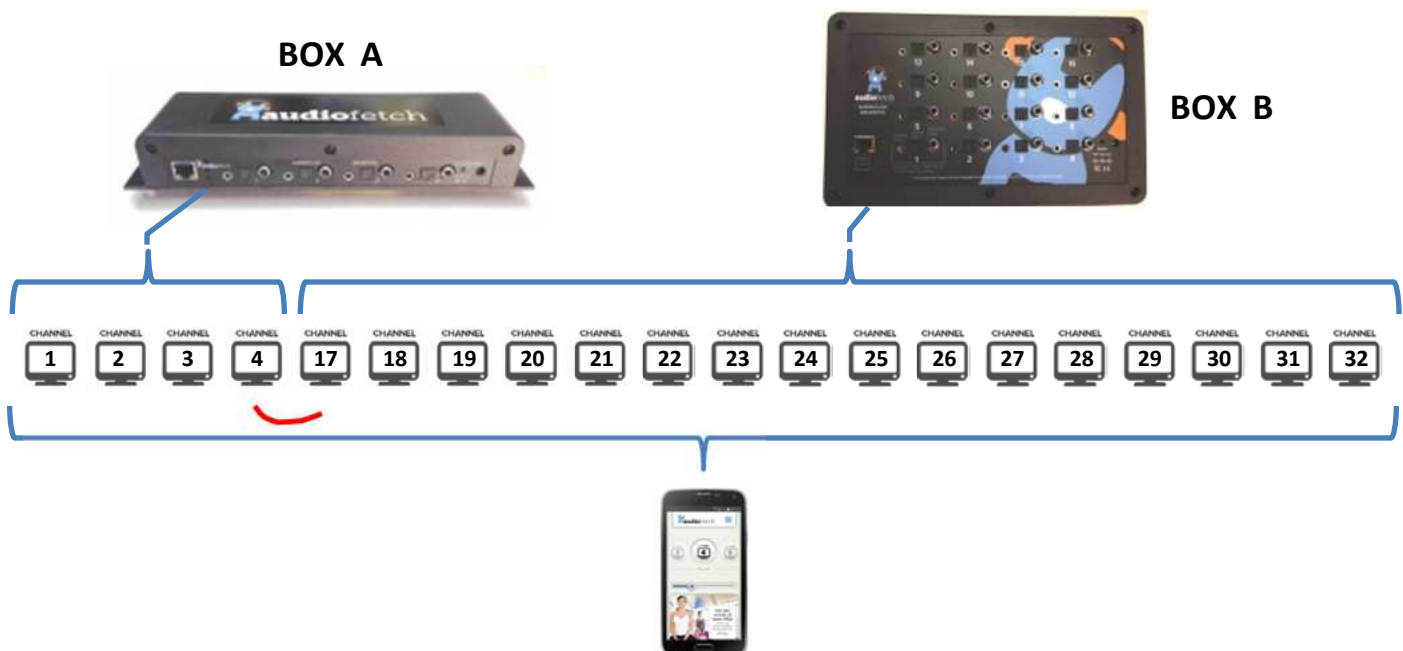

While there is nothing wrong with this default channel numbering in the App, the discontinuity in channel numbering might be confusing to end users. If so, the **CHANNELS SETUP** page, described next, can be used to configure user-defined names for the channels displayed by the App.

Location Features:

Location Features help simplify use of the AudioFetch App in large AudioFetch systems where many different boxes may exist on a network operating in multiple different physical locations. Instead of displaying all of the channels from all of the boxes (which may be very many channels), the App will ask the user to select a location from a list when the App starts up. Only channels from boxes configured with that exact same location name will be displayed, so that the user is presented only those channels relevant to his or her physical location.

Use of location features is optional. If not used then ***all boxes on the network must have the Location Features checkbox unchecked***. This will ensure the AudioFetch App operates in default mode (no location list). If just one box on the network has Location Features enabled, it will trigger the AudioFetch App to operate with a location list.

If Location Features are enabled, then each and every box on the network should have a location name specified in the **MULTI-BOX SETUP** page. All boxes within the same physical location should have exactly the same name specified, boxes in a different physical location should have exactly that other location name specified, etc. Any boxes with location name unspecified will automatically be grouped into “Unknown Location” location by the AudioFetch App. Location names can be up to 40 characters long.

For a group of boxes using the same location name (ie: boxes within one specific location), the App still needs to know how to order the displayed channels. Therefore, all boxes using the same location name must each be assigned a different/unique box letter. However boxes in a different location can re-use box letters, so long as boxes within that different location each have a different/unique box letter. Like this:

Location Name:	Rec Room	Customer Lounge	Hall 1	etc...
Boxes Present:	BOX A	BOX A	BOX A	
	BOX B	BOX B	BOX B	
	BOX C		BOX C	
			BOX D	

There is no limit to the number of different location names in an AudioFetch system. At each location up to 32 boxes can use the same location name. Therefore, using Location Features the number of boxes in an AudioFetch system is unlimited. Exception: When a network is configured for DNS discovery of AudioFetch boxes, the maximum number of boxes supported (for DNS discovery) is 130. If needed, the Discovery List feature can be used to expand beyond the 130 box limit – contact AudioFetch Support for further help.

When Location Features are enabled, the use of GPS coordinates is optional. When used, the GPS coordinates simply help the AudioFetch App sort/order the list of locations displayed to the user, with the location closest to the user’s mobile device displayed at the top of the list. To use GPS coordinates: Enable the checkbox then enter GPS coordinates (latitude and longitude) for that location. For all the boxes with a given location name specified, the same GPS coordinates should be entered.

7.5. Channels Setup

The **CHANNELS SETUP** shows the installed channels and allows alternate names/numbers to be assigned for each channel. The “Enable” checkboxes can be used to disable individual channels – the App will no longer display any which are un-checked.

The default **CHANNELS SETUP** page for a 16-channel box looks like this:

CHANNEL SETUP - STEREO

	Name	Enable		Name	Enable
Channel 1		☒	Channel 9		☒
Channel 2		☒	Channel 10		☒
Channel 3		☒	Channel 11		☒
Channel 4		☒	Channel 12		☒
Channel 5		☒	Channel 13		☒
Channel 6		☒	Channel 14		☒
Channel 7		☒	Channel 15		☒
Channel 8		☒	Channel 16		☒

Maximum 10 characters for channel names entered here
Only first 5 characters are displayed in AudioFetch App

All installed channels are enabled and all the channel name fields are blank. The App will display its default channel numbers for this box, as described above.

NOTE: Boxes with fewer channels installed will show the non-installed channels greyed out.

The default channel numbers displayed by the App may be replaced by making entries in the “Name” fields. Although up to 10 characters may be entered in the Doghouse, the App will display **only the first five characters** of the channel name entry. The App will continue displaying the default channel number for any channels with empty names in the Doghouse.

So taking the example just above, where a 4-channel box has been defined as BOX A and a 16-channel box has been defined as BOX B, channel names could be re-defined for BOX B like this (BOX B’s Doghouse):

CHANNEL SETUP - STEREO

	Name	Enable		Name	Enable
Channel 1	5	☒	Channel 9	13	☒
Channel 2	6	☒	Channel 10	14	☒
Channel 3	7	☒	Channel 11	15	☒
Channel 4	8	☒	Channel 12	16	☒
Channel 5	9	☒	Channel 13	17	☒
Channel 6	10	☒	Channel 14	18	☒
Channel 7	11	☒	Channel 15	19	☒
Channel 8	12	☒	Channel 16	20	☒

Maximum 10 characters for channel names entered here
Only first 5 characters are displayed in AudioFetch App

IMPORTANT: The “Save Settings” button must be clicked after any changes are made, otherwise the new settings will be lost at the next power cycle.

With the redefined channel names shown above, our 2-box example system will now have the App displaying a continuous set of channel numbers: 1-4 for the 4-channel BOX A, and 5-20 for the 16-channel BOX B.

Remember, the channel names can be numbers or characters such as: CBS, MSNBC, CH01, etc.

7.6. Audio Settings

The **AUDIO SETTINGS** page is used to access three different sets of configurations:

AUDIO GAIN

PUBLIC ADDRESS

ACE (Audio Control and Enhance)

The **AUDIO GAIN** section displays current audio status (signal level, active input source) for the channel selected from the drop-down list, and allows the gain to be adjusted. Status begins updating only after AudioFetch has connected to the network, therefore when using this page please be sure the AudioFetch box is connected to a working network.

AUDIO GAIN - STEREO

Adjust settings for channel: Channel 11 ▾

Audio Gain (dB)	12.5	Save	Default: 10.0
Valid Audio Gain range is -100.0 to 20.0 in 0.5 dB steps (m to mute)			
Peak Audio Status	83.9 %	Adjust gain to see maximum value here hit approximately 70% - 95%	
Source	Analog		

To set the Audio Gain:

1. Select the desired channel to adjust from the drop-down list
2. Ensure an audio source is connected to the corresponding input on the box.
3. Monitor the Peak Audio Status number, if an active audio source is connected then it will constantly change.
 - a. NOTE: There will be no status indicated if the selected channel is not enabled in Doghouse Channels Setup page

- b. If the Audio Gain setting is very low (a large negative number) then this might be the problem – try changing the Audio Gain setting to a number like 15 (positive fifteen)
 - c. If it remains at 0% then check if enabled in the Channels Setup page, check the audio connections, else something is likely wrong in the cabling or audio source
4. Optimum Peak Audio Status is when the status hits 60% to 85% at its maximum
5. If Peak Audio Status is too low or too high, enter a new value for Audio Gain. Values entered can be numbers like 7 or 9.0 or 12.5 (the tenths digit can only be “0” or “5”). Acceptable range is -100.0 to 20.0. Press the Enter key or click the “Save” button to set/save the new gain value.
 - a. After saving, you should notice a corresponding change in the Peak Audio Status level immediately
 - b. Keep adjusting the Audio Gain until Peak Audio Status is within optimum range
6. Repeat this procedure for all audio channels

The example presented above shows an Audio Gain setting of 12.5 and resulting Peak Audio Status of 83.9% (this will change continuously).

The **PUBLIC ADDRESS** section (please scroll further down on the **AUDIO SETTINGS** page) allows the audio from one input channel to interrupt/override all other channels automatically when a signal is detected on the designated PA Interrupt channel. This allows announcements from a facility’s PA system to be heard by everyone listening to AudioFetch with earphones so that important announcements are not missed.

To use the Public Address feature:

1. Connect a line-level microphone signal to one of the channel inputs – this will be called the “designated PA channel.”
 - a. The AudioFetch inputs are not directly compatible with microphones, do not plug a microphone directly into a channel input.
 - b. A line-level signal would normally be available as an output on an existing PA amplifier/system in a facility.
 - c. Alternately, a microphone preamp can be used together with a microphone to provide a line-level signal – contact AudioFetch support for recommendations.
2. Adjust the audio gain as previously described, for the designated PA channel

3. In the **PUBLIC ADDRESS** section, select the designated PA channel from the drop-down list – the example presented below shows Channel 5 selected
4. Use a mobile device (preferably with earphones), listen to a different channel on the AudioFetch system, one that has an active audio source (TV, music, etc.), then speak into the microphone – the microphone’s signal should automatically replace the TV/music (then the TV/music will automatically return after the microphone becomes silent)
5. Adjust the Detection Speed, Detection Threshold, and Hold Time, until the automatic interrupt/override occurs as desired when someone speaks into the microphone.
 - a. Experiment with different settings to become familiar with what they do
6. Click the Save Settings button to save the new settings

In certain applications the AudioFetch system might be used as a permanent PA system, in this case enable the Force Override Always checkbox (and then click Save Settings button) – this causes audio from the designated PA channel to be to always stream to all channels.

Here is an example of Public Address configured with channel 5 as the designated PA channel:

PUBLIC ADDRESS

This channel will interrupt and override all others: Channel 5 ▾

		DEFAULTS	INFO
Force Override Always	☐	unchecked	
Detection Speed	5 ▾	7	10 is fastest
Detection Threshold	40 % ▾	25 %	Want this about 1/3 Peak Audio Status above
Hold Time	3.0 ▾	2.5	Seconds of additional interrupt time

Save Settings

More about the Public Address settings:

The **Detection Speed** setting helps prevent accidental interrupts (random interruptions to the audio in all other channels) if the PA microphone picks up occasional noise, gets bumped, etc.

A lower/slower setting means a longer period of sound from the microphone must be detected before an interrupt occurs – this helps prevent accidental interrupts but it also means there is a longer delay before the interrupt occurs after a person starts speaking into the PA microphone. If a lower setting is required for your situation, then personnel making announcements should be trained to preface their announcement with a word or two to stimulate the slower detection (example: “Announcement, announcement, the facility will be closing in 15 minutes....”).

The **Threshold** setting should be set to approximately 33% of the maximum Peak Audio Status seen when speaking into the microphone. It can then be adjusted up or down as desired to affect detection sensitivity (adjust up to reduce detection sensitivity, down to increase sensitivity). The Detection Speed and Threshold adjustments work together to set the overall detection sensitivity, so it’s best to play with different combinations to achieve the best detection performance.

The **Hold Time** setting determines how long the microphone signal will continue interrupting (all other channels) after a person stops speaking. Adjust it higher to prevent the system from reverting back to normal audio on all channels when the announcer pauses between words.

To use the Public Address feature in a multi-box installation, the line-level microphone signal must be split and connected to a channel on each of AudioFetch boxes. Then the Doghouse in each box must be configured to enable the PA Interrupt feature as described above. It is recommended that the same settings for Detection Speed, Threshold, and Hold Time be used on all boxes.

The **ACE** section (please scroll further down on the **AUDIO SETTINGS** page) provides optional adjustments which can improve audio quality in facilities where network/WiFi conditions may not be optimum for AudioFetch. Increasing the ACE setting will increase the amount of audio buffering used by the AudioFetch App – this can improve audio quality at the expense of slightly more latency (more delay between on-screen video and the audio heard by users). Usually the latency is not noticeable for ACE settings 1, 1.5, and 2. The latency may be just slightly noticeable for higher settings, but not so much in a fitness club or sports bar environment. Please review the displayed information and instructions, then contact AudioFetch Technical Support if further assistance is needed with the ACE settings.

ACE

Audio Control and Enhance - buffer feature (optional)

As a first option to solve poor quality audio, please consult the AudioFetch troubleshooting guide and/or AudioFetch Technical Support (888.330.4283 x3) to ensure network settings and source audio settings are optimized. However some WiFi networks may benefit from additional audio buffering at the expense of audio delay (latency).

To employ the ACE feature, first be sure that your mobile device is running latest version of AudioFetch App from iTunes or Google Play store. Then move setting (below) one place to the right corresponding to the type of mobile device being tested (Apple or Android) then click the Save button. On your mobile device completely close the AudioFetch App, re-open the App, and check the audio quality again counting any audio interruptions over a 1-2 minute test period. Progressively choose settings further to the right (remember to close then open the App after each setting change), until the overall experience is satisfactory. Hint: Typically Apple phones are more forgiving of WiFi issues so it may be wise to make changes to Android only initially. **Reminder:** encourage your users to update their AudioFetch App to latest version in order to experience the benefits of ACE!

Contact AudioFetch Technical Support if these adjustments either do not resolve audio issues or result in an unsatisfactory user experience.

Default settings are 1 for Apple (iOS) and 1 for Android. Choosing 1, 1.5, or 2 is optimal for most environments. Choosing settings 3 and 4 may be masking other issues.

ACE SETTING	1	1.5	2	3	4
Apple (iOS)	☒	☐	☐	☐	☐
Android	☐	☒	☐	☐	☐

Save

(must click Save to apply changes)

REMINDER: After saving a change, the AudioFetch App on your mobile device must be closed then re-started.

7.7. System Status

The **SYSTEM STATUS** page shows basic information about the system, installed firmware versions, and connected users (see example on next page). Not all information is refreshed automatically, click the “Refresh” button at the bottom of the page to update the display of latest status.

Click the “Reset Statistics” button to reset the general statistics in the upper area.

SYSTEM STATUS - STEREO

Serial Number: 3386052608
Main AudioFetch Firmware Version: 2021-08-02
Audio Channels Firmware Versions: [\(click here\)](#)
Installed Channels: 16
Enabled Channels: 16
Connected Users: 4
Max. Connected Users past 24 hours: 4
Connected Users past 7 days: 6
Max. Connected Users past 30 days: 8
Max. Connected Users ever: 8

[Reset Statistics](#)

Connected Users per channel

Ch 13: 0	Ch 14: 1	Ch 15: 0	Ch 16: 0
Ch 9: 0	Ch 10: 0	Ch 11: 0	Ch 12: 0
Ch 5: 0	Ch 6: 0	Ch 7: 1	Ch 8: 0
Ch 1: 2	Ch 2: 0	Ch 3: 0	Ch 4: 0

[Click table for user details](#)

[Refresh](#)

[Link to AudioFetch reporting portal online](#)

Click anywhere in the “Connected Users per channel” area and a detailed list of currently connected users is displayed with various sorting options provided by the drop-down selector:

CONNECTED USER LIST

Sort-IP ▾

No. 1	IP = 192.168.0.129	Ch. = 1	Time =	00:23:21
No. 2	IP = 192.168.0.112	Ch. = 14	Time =	00:27:04
No. 3	IP = 192.168.0.50	Ch. = 1	Time =	00:27:19
No. 4	IP = 192.168.0.71	Ch. = 7	Time =	00:27:43

Refresh

[Return to System Status Menu](#)

© 2014 - 2016 AudioFetch

AudioFetch provides additional monitoring statistics online, click the link at the bottom of the **SYSTEM STATUS** page to access the online reporting service. Contact AudioFetch Support if you have lost or forgotten your online login credentials.

7.8. Tools and Utilities

The **TOOLS AND UTILITIES** page provides means to change the Doghouse username/password, an alternate QoS adjustment which can improve audio quality on some networks, settings related to how automatic firmware updates are delivered, and other utility functions.

To change username/password, enter the current credentials into the first two boxes, then enter the new username/password into the last two boxes and click the “Modify Name/Password” button.

TOOLS AND UTILITIES

All entries 7 char max.

Name

Password

New Name

New Password

[Modify Name/Password](#)

Force alternate WMM VOICE QoS ☐

Enable alternate SSDP advertisements ☐

Installed Main AudioFetch Firmware: 2021-08-02

Enable Online Automatic Firmware Updates ☒

[Check now for online update](#)

Local Update - disable Automatic Updates checkbox and browse for update file

[Browse...](#) No file selected.

[Upload New Firmware](#)

Restrict Doghouse Access (timed window after power-on)
Use this to set a time window for initial log-in to Doghouse after power-on. If window time expires with no log-in then Doghouse is disabled until next power cycle. Once successfully logged-in, Doghouse access remains enabled until next power cycle. Clicking the Disable button will disable access until next power cycle.

Initial Doghouse log-in window (minutes): [Forever](#)

Click here to disable Doghouse now: [Disable](#)

Blink LEDs ☐ RED ☐ GREEN ☐ YELLOW
(To ID this box)

Cycle through all LEDs ☐

[Restore Factory Settings](#) [Restart](#)

The “Force alternate WMM VOICE QoS” checkbox should be used when experiencing audio quality issues – especially on busy networks. Experiment with this setting to determine if it can improve audio quality. Expected behavior is that audio will be better with this box un-checked on networks using Cisco equipment, and better with this box checked on networks using non-Cisco equipment. But this is not certain and one should experiment to determine which setting produces the best audio quality.

“Enable alternate SSDP advertisements” adjusts the information sent out in SSDP advertisement packets once every second. On some networks, enabling this setting may help allow the AudioFetch App (on users mobile devices) to more easily connect to AudioFetch boxes. This is especially true for networks based on Aruba equipment. If the App cannot connect and receive AudioFetch audio streams try experimenting with this setting. See AudioFetch app note

“Network Quick Start Guide” or app note “Network Details” for more information about SSDP advertisement packets.

There is a checkbox to enable/disable Online Automatic Firmware Updates, which are provided from time to time by AudioFetch (the box must be connected to a network with Internet access). Default setting is enabled, AudioFetch recommends this be left enabled. AudioFetch system firmware updates are rare and generally occur late at night. The AudioFetch box checks for an available update once just after power-on and then once every 5 hours thereafter.

If desired, the “Check now for online update” button may be clicked. A confirmation will pop up, click the “OK” button to proceed. There is no subsequent display about an update being available or starting, but if an update is available then it will begin automatically and the download progress is indicated by the yellow status LED on the AudioFetch box flashing (during download). After the download completes, AudioFetch will reset itself, execute the update (yellow LED will turn on again during update), then reboot. Completing all of this typically takes about 10-20 seconds.

New firmware may be manually uploaded to AudioFetch if needed (see “Local update” section near the center of the page) but this would be an extremely rare occurrence and should be done only while receiving guidance from AudioFetch tech support on a case-by-case basis. Note that this feature currently supports browsers running only in Windows operating system.

“Restrict Doghouse Access” is a security feature to help prevent unauthorized access into the Doghouse by end users of the AudioFetch system. By default, the Doghouse may be accessed at any time so long as the correct username/password credentials are entered. By selecting a specific log-in window of time from the dropdown box, the Doghouse will only be accessible if the initial log-in occurs within the selected number of minutes after power-on. The choices are: 1 minute, 2 minutes, 5 minutes, 10 minutes, and “Forever”. If an initial log-in does not occur within the selected time window, then the Doghouse becomes and remains completely inaccessible until the next power cycle occurs. For example, if a 1 minute time window is selected, you must log-in to the Doghouse within 1 minute of power-on (it’s actually 1 minute from the time the green status LED turns on solid). Once successfully logged-in, the Doghouse will remain accessible indefinitely, until either: the next power cycle, or the “Disable” button is clicked. If access to the Doghouse is needed again, just power cycle the box and log-in again within the 1 minute window.

The “Blink LEDs” section provides checkboxes for each of the three status LEDs on the AudioFetch box. When any of these checkboxes are enabled, the normal status display is temporarily

replaced by the enabled LEDs blinking. This is simply a way to force the status LEDs on a particular box to blink – which can be useful for identifying specific boxes in a multi-box installation. Be sure to uncheck all of these to return the LEDs to normal display of status.

Clicking the “Restore Factory Settings” button clears most AudioFetch Doghouse settings, restoring to factory default values. The Audio Gain settings for each channel will not be changed. AudioFetch will automatically reboot after clicking this button. After performing a factory restore, Doghouse settings should be reviewed and adjusted as necessary (don’t forget that the username/password will be reset back to default ADMIN/admin as well).

7.9. Contact & Links

The **CONTACT & LINKS** page contains contact information in case support is required, as well as a link to the online portal.

CONTACT & AD PORTAL

844.443.3824
support@audiofetch.com

[Link to AudioFetch reporting and ads portal online](#)

© 2014 - 2016 AudioFetch

7.10. Discovery List

The **DISCOVERY LIST** page contains special settings to be used only in rare situations. Generally this page should be left disabled.

If a network is configured to use DNS Lookup discovery method (see AudioFetch networking app notes), and if more than 4 AudioFetch boxes will be operating on the network, then the settings on the DISCOVERY LIST page must be used. The settings should be enabled/entered by IT support personnel together with assistance from AudioFetch Technical Support. Further information and instructions are presented on the DISCOVERY LIST page itself – and please contact AudioFetch Technical Support if you have any questions.

DISCOVERY LIST

Settings on this page allow more than 4 AudioFetch boxes to be used in a system when the network is configured to use DNS LOOKUP discovery method (which is normally limited to 4 boxes max). See the User Guide for your AudioFetch product for more information about the settings on this page.

If your network does not use DNS LOOKUP discovery method for AudioFetch, or if you are unsure, then leave this page disabled. Your IT support personnel can provide more information, or contact AudioFetch Tech Support at 844.443.3824 if you have questions about the use of these settings.

Instructions:

1. If DNS LOOKUP is **not** being used with your AudioFetch system then stop here - do not enable the settings on this page.
2. If using DNS LOOKUP with 4 or fewer boxes then stop here - do not enable the settings on this page. Instead configure network for DNS LOOKUP on all of those boxes.
3. If using DNS LOOKUP with 5 or more boxes then proceed...
4. Ensure your network reserves fixed IP addresses for all AudioFetch boxes on your network (reservations usually made in your network's DHCP server settings).
5. Configure your network for DNS LOOKUP on 4 of the AudioFetch boxes - see App Note "Network Quick Start Guide" for DNS LOOKUP instructions.
6. Access the Doghouse on each of the 4 AudioFetch boxes configured for DNS LOOKUP on your network, follow remaining instructions (on each of the boxes).
7. Check the "Enable This List" box (just following these instructions).
8. In the list below click the individual enable checkboxes and enter IP addresses for all of the AudioFetch boxes on the network (including the boxes configured to use DNS LOOKUP). Order of the entries does not matter and it is OK to have disabled entries in the middle of the list.
9. All unused entries in the list must have IP address equal to: 0.0.0.0 (this disables the entry).
10. Reminder: this page should be disabled on all boxes which are not configured for DNS LOOKUP on your network.
11. Double-check that the entries in the list are all correct and the corresponding boxes are indeed present on your network.
12. Click the SAVE button.
13. Test that all AudioFetch boxes/channels can be accessed in the AudioFetch App.
14. If more AudioFetch boxes are added in the future, ensure that your network reserves a fixed IP address and then add it to this list in the 4 boxes which are configured for DNS LOOKUP on your network.

Enable This List ☐ Enable only after reading instructions above

	Enable	IP Address	Notes
1	☐		Entering 0.0.0.0 will result in blank field after save (effectively disabled)
2	☐		Values > 255 will cause unpredictable results after save, just re-enter
3	☐		Order does not matter, OK to have disabled entries in middle of list
4	☐		
5	☐		
6	☐		
7	☐		
8	☐		
9	☐		
10	☐		

11	☐	
12	☐	
13	☐	
14	☐	
15	☐	
16	☐	
17	☐	
18	☐	
19	☐	
20	☐	
21	☐	
22	☐	
23	☐	
24	☐	
25	☐	
26	☐	
27	☐	
28	☐	
29	☐	
30	☐	
31	☐	
32	☐	

Save Settings Must click Save to apply changes

© 2014 - 2019 AudioFetch

8. Stadium Mode

Previous section 7.4 describes how to employ multiple AudioFetch boxes to increase the total number of audio channels by designating each of the boxes with a different/unique box ID. When increasing the number of channels with additional boxes the total simultaneous user count generally remains at 250 for all the channels from any one box.

Some applications require fewer channels but more simultaneous users. For example the audio announcement feed for a sporting event in a stadium where hundreds or even thousands of users might want to receive from the same audio channel.

AudioFetch supports this by operating in an optional “Stadium Mode” where multiple boxes are operated in parallel, each additional box providing the same audio content to an additional 250 users. To operate an AudioFetch system in Stadium Mode:

1. Calculate how many AudioFetch boxes are required:
 - a. Divide the maximum number of simultaneous users by 250
 - b. Then round the result up to next highest integer – this is the number of AudioFetch boxes required
 - c. Example:

1400 is maximum number of simultaneous users needed
 $1400 / 250 = 5.6$
Round up to 6
Therefore 6 AudioFetch boxes will be required
2. All boxes should be the same type (same model) – generally these will be 4-channel signature series or equivalent multiple boards in a larger enclosure.
3. All boxes must be configured with the same Box letter designation (see section 7.4 for how to configure)
 - a. Example: configure **all boxes** as “BOX A”
4. All boxes must be configured with the same channel settings (see section 7.5)
 - a. All boxes must have the same channels enabled/disabled
 - b. All boxes must have the same channel names entered
5. Wiring:
 - a. All boxes must be connected to the network
 - b. The audio channel inputs must be parallel-connected on all boxes (see below)
6. Important network considerations:
 - a. Your network must be able to support the streaming traffic from all the boxes without introducing substantial timing jitter or delay in packet delivery to the end user mobile devices.
 - b. Especially your WiFi network must be designed and installed to support the intended number of simultaneous users with sufficient bandwidth for real-time audio streaming. Please consult with an IT specialist/company to ensure your WiFi can support the intended streaming traffic with minimum packet jitter and delay.

As a convenience, multiple separate 4-channel AudioFetch devices/cards can be supplied inside a single expandable Signature series enclosure as part of a Stadium Mode system. While only one power supply is required (per enclosure), the multiple cards must be considered as separate/independent devices:

- Each of the cards will have an exposed Ethernet connector, all of which must be connected into the network.
- Each of the cards will have 4 audio channels – each of these channels must be parallel-connected together external to the box (see below)

If all configuration settings are made correctly – the AudioFetch App will display only one set of channels equal to the channels configured on each of the AudioFetch boxes and users will be distributed evenly amongst all the AudioFetch boxes in order to achieve a higher total user count.

Example:

- 6 AudioFetch Lite boxes (4 audio channels each) are all configured as BOX A
- Channel settings on each of the boxes are configured identically like this:


CHANNEL SETUP - STEREO

	Name	Enable		Name	Enable
Channel 1	CH-1	☒	Channel 9		☐
Channel 2	CH-2	☒	Channel 10		☐
Channel 3	CH-3	☒	Channel 11		☐
Channel 4		☐	Channel 12		☐
Channel 5		☐	Channel 13		☐
Channel 6		☐	Channel 14		☐
Channel 7		☐	Channel 15		☐
Channel 8		☐	Channel 16		☐


Maximum 10 characters for channel names entered here
Only first 5 characters are displayed in AudioFetch App

- NOTE: The doghouse configuration settings must be accessed and set identically in all of the 6 boxes.
- A user who starts the AudioFetch App will see three available channels:
CH-1 CH-2 CH-3
- Each user will receive an audio stream from one of the 6 AudioFetch boxes, the AudioFetch system will automatically ensure that the user streaming load is distributed evenly amongst the boxes.
- Up to 1500 users can receive streams simultaneously from the system (6 boxes x 250 users per box).

The external wiring on the boxes will look like this (power supplies not shown, each box will need its own power adapter):

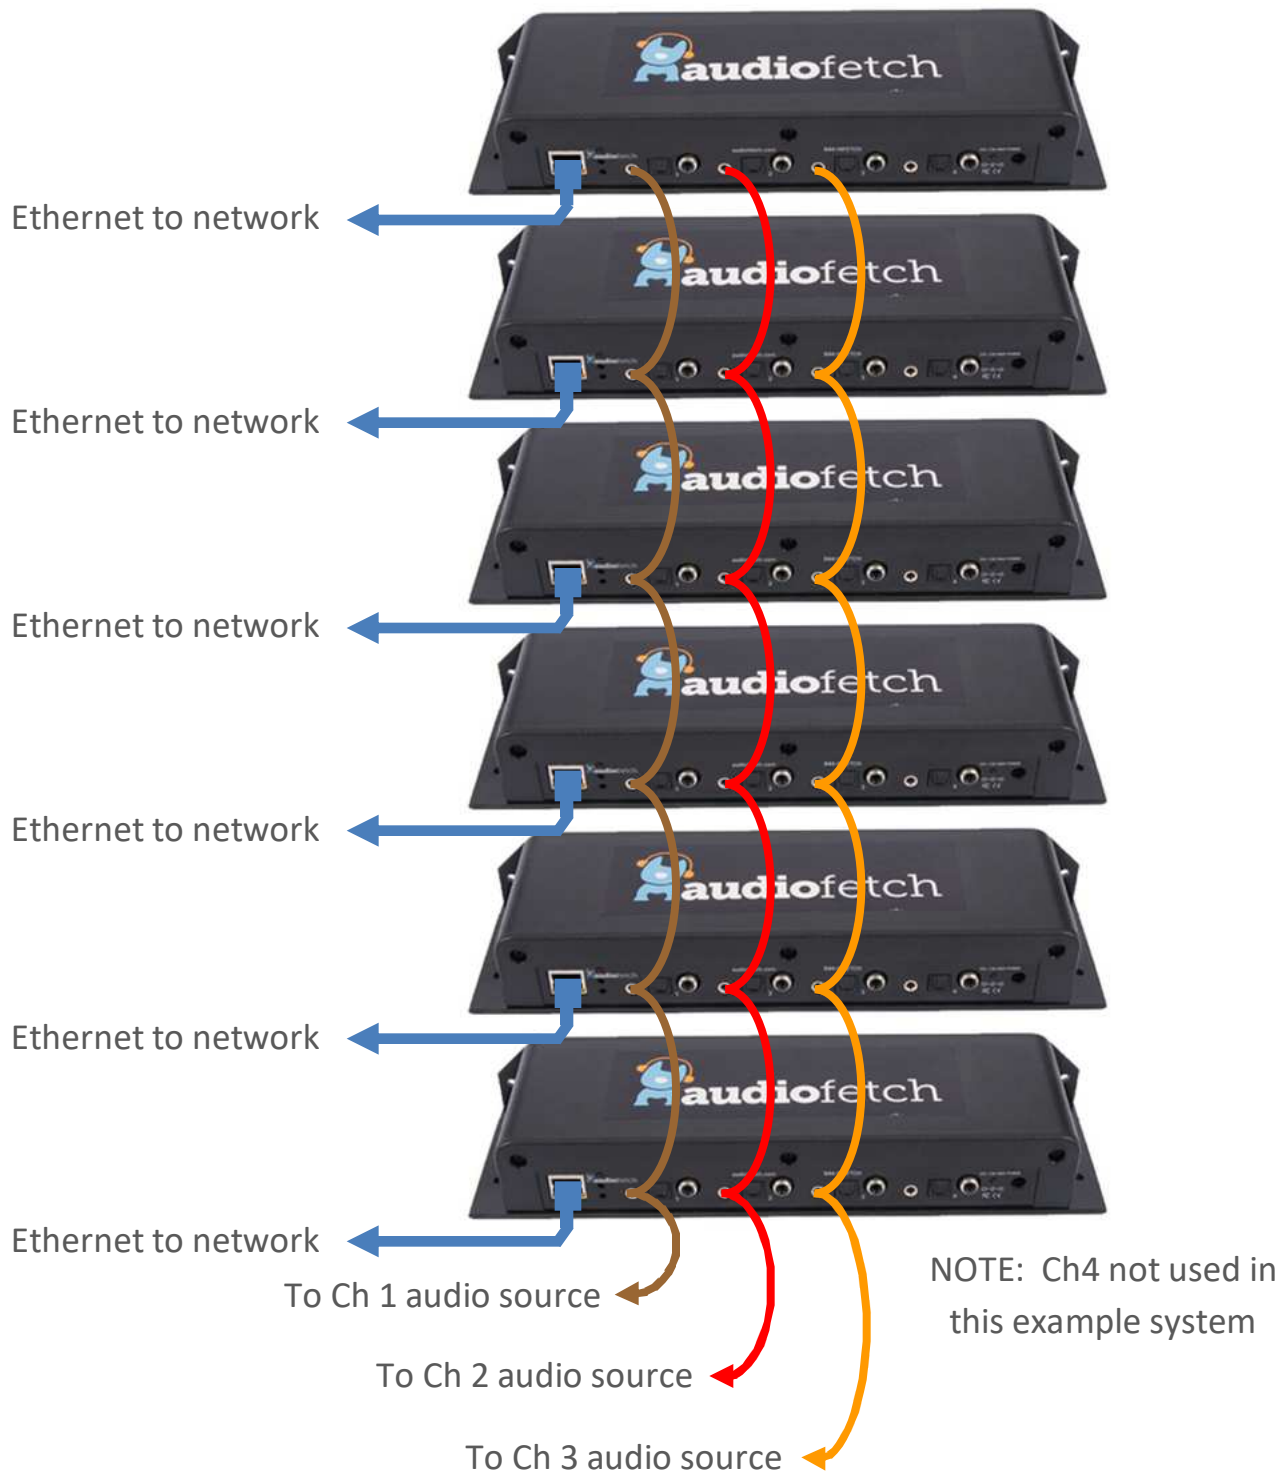


Another example is a 1000-user Stadium Mode system supplied as four stacked 4-channel boards in a single enclosure. Although there is only one power adapter needed, each of the boards' Ethernet connectors must be connected into the network individually and the audio inputs on each of the cards must be parallel connected, like this:

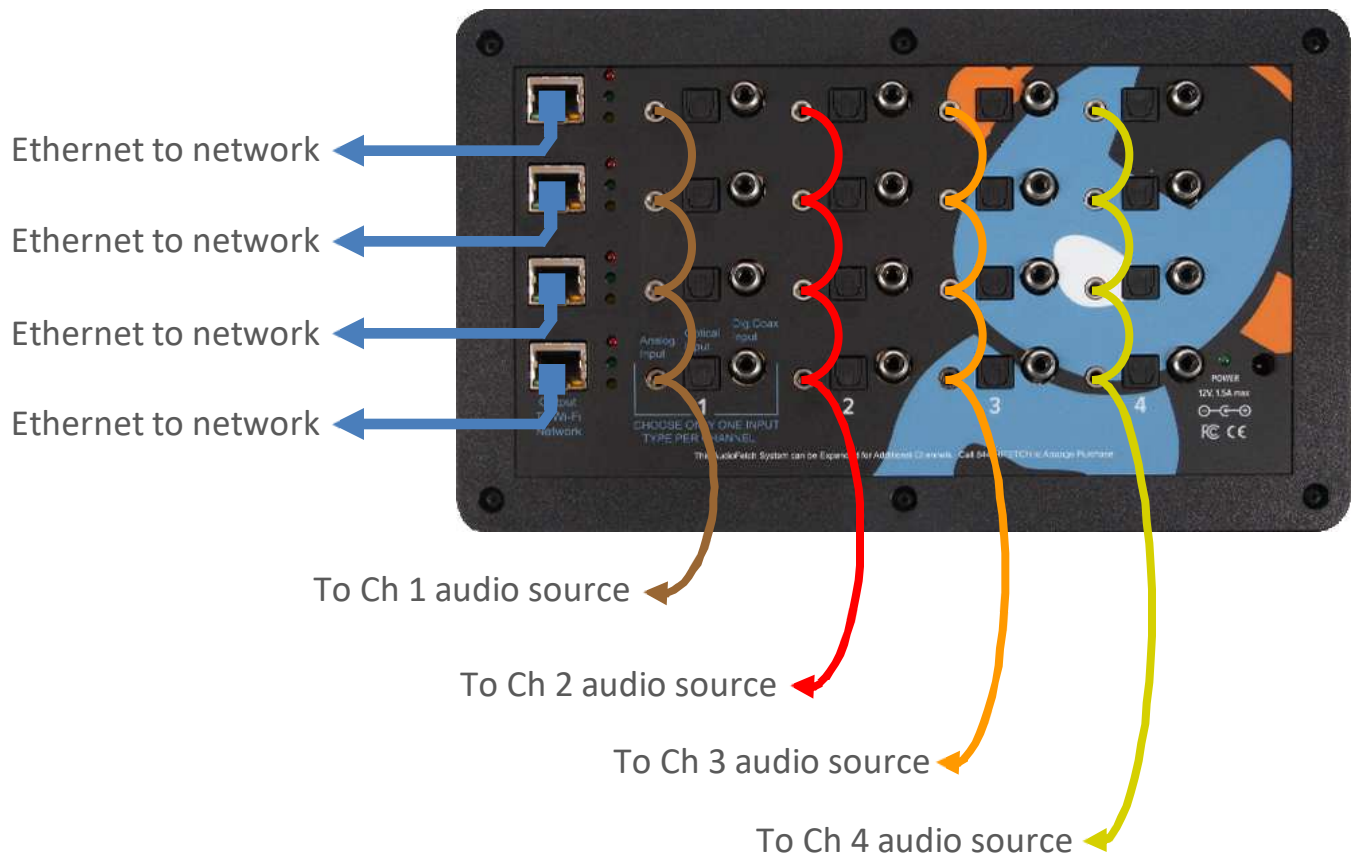

REMINDER: The doghouse configuration settings will need to be accessed on each of the 4 boards and set identically (same box letter, channel enables/names all set the same).

The easiest way to achieve the parallel audio input connections is to use multiple female to male Y splitter/adapters, like this example for splitting one audio source into 4 inputs as required by the example just above (repeat this set of splitters 4 times for the 4 channels):

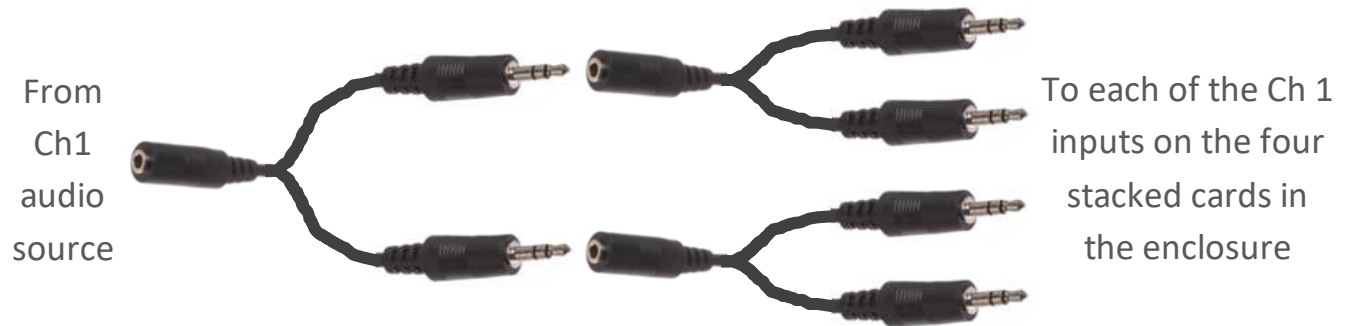

If the audio source is optical or digital coax then active splitters are available commercially.

It is possible to operate in Stadium Mode with a mix of different AudioFetch models (boxes having different numbers of installed channels), however in this case all boxes must be configured with exactly the same number of **enabled channels**, the box letter must be the same for all boxes, and the channel names for enabled channels must be the same.

For help setting up a system to operate in Stadium Mode please contact AudioFetch Technical Support.

9. Reference Information - Network Traffic and Guest Networks

AudioFetch typically works out of the box on simple networks such as when connected into a single small business wireless router using the main (not guest) WiFi. More complex networks may require configuration adjustments (firewall, etc.). Information in this section is provided to assist IT/Network personnel when such adjustments are necessary.

Network traffic used by the AudioFetch System, unless otherwise noted packets are unicast between IP address of the Mobile Device (running AudioFetch App) and IP address of AudioFetch Box:

Traffic direction: Mobile Device (AudioFetch app) → AudioFetch box:

<u>Protocol</u>	<u>source port</u>	<u>dest port</u>
UDP multicast (239.255.255.250)	p_1 *	1900 (this is primary SSDP discovery)
TCP	p_2 *	80
TCP	p_3 *	6971

UDP broadcast (255.255.255.255)	30981	30981	(used for fallback discovery)
DNS QUERY	(usual for DNS)	(usual)	(used for fallback discovery)
mDNS One-Shot QUERY	p_4 *	5353	(used for fallback discovery)

Traffic direction: **AudioFetch box → Mobile Device (AudioFetch app):**

<u>Protocol</u>	<u>source port</u>	<u>dest port</u>	
UDP	1900	p_1 *	
TCP	80	p_2 *	
TCP	6971	p_3 *	
UDP	6970	6970	This is the audio stream
UDP multicast (239.255.255.250)	1900	1900	(used for fallback discovery)
UDP	30981	30981	(used for fallback discovery)
UDP	5353	p_4 *	(used for fallback discovery)

* p_1, p_2, p_3, p_4 indicate port numbers which have been chosen by the mobile device's operating system and typically are different each time the app runs

Fallback discovery traffic is always present but only needs to be supported/allowed on the network if standard SSDP discovery is not supported (for example if network security settings block SSDP traffic). If SSDP fails then AudioFetch will automatically fall back to alternate discovery methods.

In some cases, with a complex network and tight security restrictions on traffic, a DNS discovery method may be required. If so, please refer to the AudioFetch App Notes: "Network Quick Start" and "Network Details" for further information on network configuration requirements. Contact AudioFetch Technical Support if further assistance is needed.

Guest Networks:

Most wireless routers and access points provide a WiFi "Guest Network" or "Guest Access" feature – typically a separate WiFi SSID which provides internet access but limits access to other local resources on the network (such as printers, network storage, etc.) which is useful when providing public WiFi access.

An example is shown below taken from the user manual for a number of common Linksys wireless routers:

How to set up guest access to your network

For **E1200 E1500 E2500 E3200 E4200**

You can use your router's guests access feature to provide your guests with access to the internet, while **restricting their access to other resources on your local network**. The guest network is shown as a open, unsecure wireless network that your guests can easily connect to. To prevent unauthorized users from using your internet access, your guest network requires that a password be entered for Internet access. The guest network is enabled by default

The user manual makes it clear that communication is prevented between the guest and local networks. The guest network is only for access to the internet. Because the AudioFetch box connects into the local network (via wired Ethernet) there's no way the AudioFetch system can work for user mobile devices connected to the guest network. Mobile devices need to communicate with the AudioFetch box, and this is being prevented by the guest network restrictions in the wireless router.

The solution is not to use the guest network but instead use the wireless router's **main** WiFi network which will not restrict communication between mobile devices and the AudioFetch box. Some guest networks have been found to be plug-n-play with AudioFetch, but this note of caution is made.

In cases where it is not possible to use the main WiFi network for public access, then the wireless router or access point must be configured with exception rules to allow communication between mobile devices on the guest network and the AudioFetch Box. In some cases simple firewall rules may be sufficient, in other cases it may be necessary to place the guest network on a separate VLAN together with the AudioFetch Box, your IT personnel will need to make this determination based on configuration capabilities of your specific network equipment.

An alternate approach is to employ a separate wireless router for guest/public WiFi access: Use its main WiFi, connect the AudioFetch Box into its wired switch ports, and then connect its WAN port into a port on the existing network for internet access. This configuration will limit public/guest access to the existing local network resources yet will not restrict the needed communication with the AudioFetch Box.

10. Regulatory Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product meets the applicable Industry Canada technical specifications.